

How to Operate a Gas 38" Propane Gas Burnisher GASS38



Please find the following correct procedure for the operation for the Polivac Gas 38" propane Burnisher.

1. Check engine oil level and condition. Ensure oil is viscous and that the correct level is present. Make sure that all daily maintenance procedures stated on the handle are carried out.
2. Fill the gas cylinder. (Gas cylinder filling should only be carried out by persons trained in propane gas bottle filling.)
3. Fit and secure the gas cylinder hose.
4. Open gas cylinder valve.
5. Set throttle to the start position.
6. Tilt the machine back to allow the pads to be off the floor.
7. Engage the starter button (located on the motor) until the machine begins operation. Each engagement should take no longer than 4-5 seconds. (An automatic thermal overload switch is activated if the start button is held down for more than 5 seconds at a time and will reset itself in one minute)
8. Run the machine for 2 minutes to ensure it is warm and to allow the oil to permeate the motor.
9. Push the throttle to 3/4 position, gently place the pads on the floor and then push in a forward movement.
10. STOPPING THE ENGINE:
 1. Tilt machine back, ensure the pads are off the floor.
 2. Turn gas off at the bottle.
 3. Set throttle lever to the start position.
 4. Clean machine before storing away.