


Instruction Manual

NH007 Cordless Vacuum

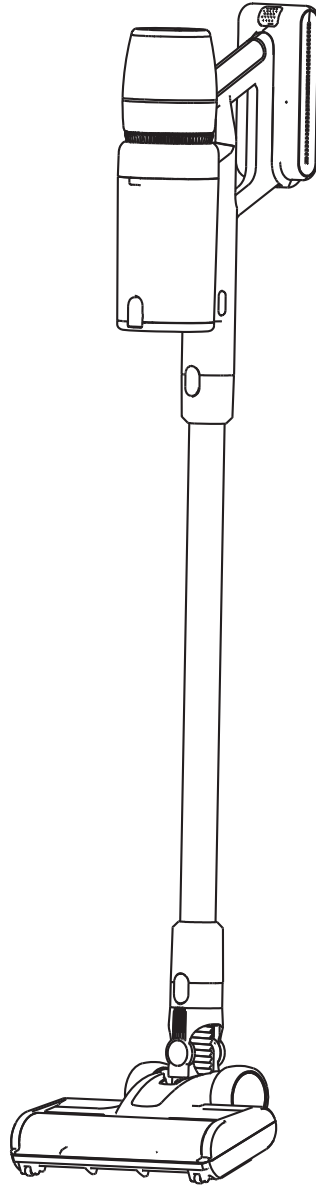

Please read the manual carefully before using the vacuum

Preface

Thank you for choosing appliance, hope you will enjoy it.

This user manual involves how to use the appliance safely and correctly, please read it carefully before using to get an ideal operating result

To use the product better, we will constantly update this operation manual. The terminal explanation right of the manual belongs to our company.

If there is any question and suggestion during using please be free to contact with our after-sell service

Table Of Contents

Table Of Contents

Important safety Instructions	1
Overview of the appliance.....	2
Operation Instructions Assemble the unit	3
Assemble the battery	3
Battery status indicator.....	4
Charging your vacuum cleaner.....	5
The wall charger base assemble	5
Empty the dust container & dust filter	6
Clean the dust container & dust filter.....	6
Clean the floor brush	7
Product parameters.....	7
Correct Disposal of this product	8

Important safety Instructions

Important safety Instructions


- 1.Please do not use this machine outdoor or in wet place.
- 2.Do not use it to pick up water and other liquids.
- 3.Please charge it with the original adaptor.
- 4.If it is broken,please have it repaired by professinals.
- 5.Please do not aim the vacuum directly at people's skin or others.
- 6.Make sure the machine is turned off when you are replacing accessories.
- 7.Do not use this vacuum to collect sharp objects.Such as screws,nails,etc
- 8.Do not use this vacuum to suck up burning things.
- 9.Do not use this vacuum to suck up lime and cement ,etc
- 10.This product is not suitable for things that are easy to burn and corrosive.
- 11.Please keep this vacuum cleaner in a cool place.
- 12.If the battery is damaged,please stop using this machine immediately.and if the liquids in the battery have contacted the skin or others,Please go to hospital immediately.
- 13.This product is forbidden to be used by children under 8 years old or inexperienced people.

Warnings:

- 1. All accessories must be original.
- 2.The adaptor can not be used for other machines.
- 3.Do not use the vacuum cleaner during charging.
- 4.The suction inlet and outlet can not be blocked ,otherwise the machine will be protected from overheating.
- 5.Do not put the battery in a fire or at a high temperature.
- 6.Do not use a non-original adaptor for charging.

Overview of the appliance

Overview of the appliance

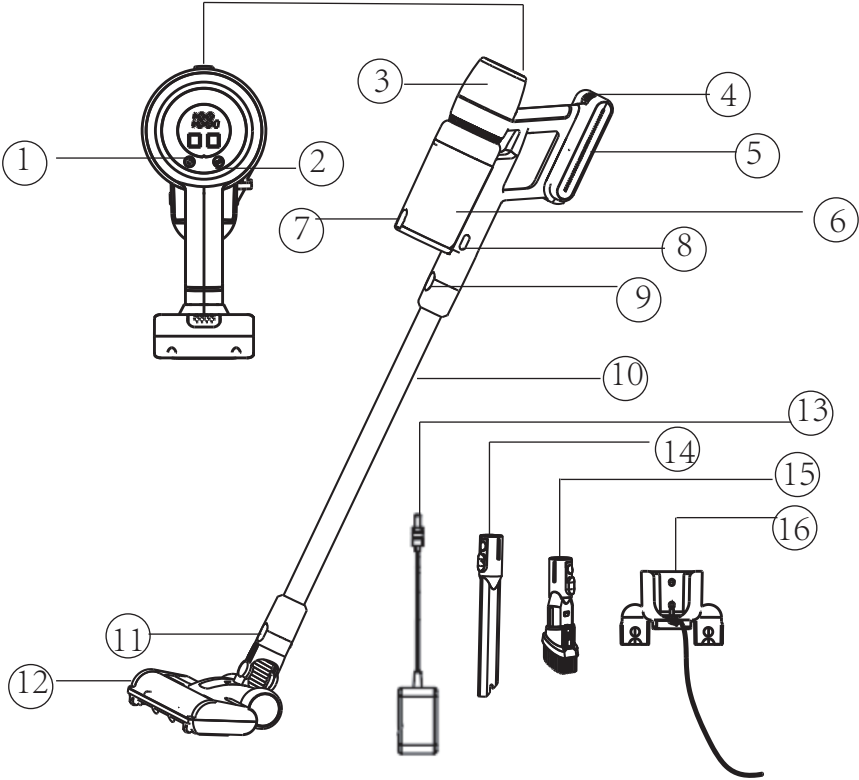

1.ON/OFF Button	2.Speed Control Button
3.Lamp	4.Battery Release Button
5.Battery	6.Dust Cup
7.Dust Dumping Button	8.Dust Cup Release Button
9.Tube Release Button	10.Tube
11.Floor Brush Release Button	12.Floor Brush
13.Adaptor	14.Crevise Tool
15.Furniture Brush	16.Wall Hanging Clip


Assemble the battery

How To Assemble And Disassemble The Vacuum Cleaner


Note: Please make sure that the machine is in the off state when assembling the vacuum cleaner.

1. Take out the vacuum cleaner conductive tube and floor brush.

2. Install the floor brush to the tube and as shown in the picture, When you hear a "click", it means that the floor brush is installed well.

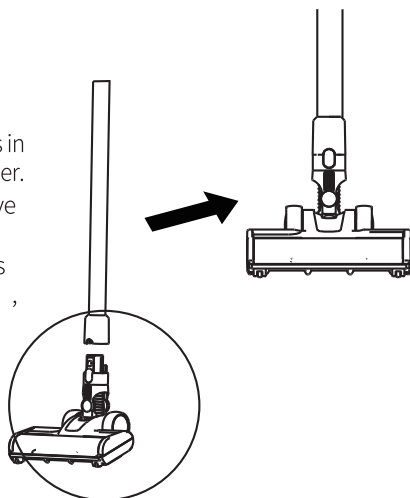


3. Please contact the tube to the suction port of the main vacuum. When you hear a "click", it means that it is installed well.

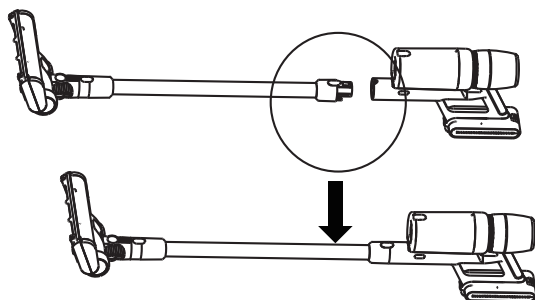

How To Assemble And Disassemble The Battery

1. Please assemble and disassemble the battery as shown in the picture. Align the snap on the battery pack and the main vacuum and push the battery pack hard. Press the button and pull the battery pack out to disassemble it.

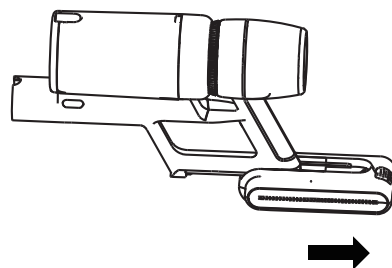


Battery status indicator

Use the manual vacuuming operation instruction


Note: Please pull out the adapter before using the vacuum cleaner.

The vacuum cleaner cannot work if the vacuum cleaner is charging or in a low battery state.

1. All original accessories can be directly connected with this vacuum cleaner. Please pay attention to whether other accessories match it if you want to use them.

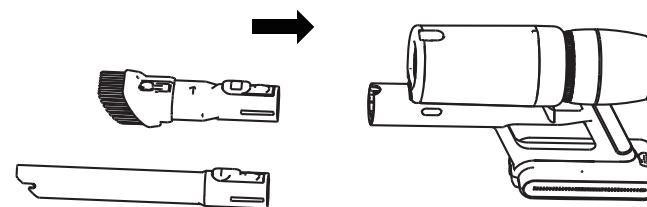

2. Press the speed control button to change the speed of the vacuum. The vacuum degree will be automatically adjusted according to the size of particles in AUTO mode. The vacuum cleaner has three speed adjustment modes: Auto mode, Low speed mode and High speed mode.

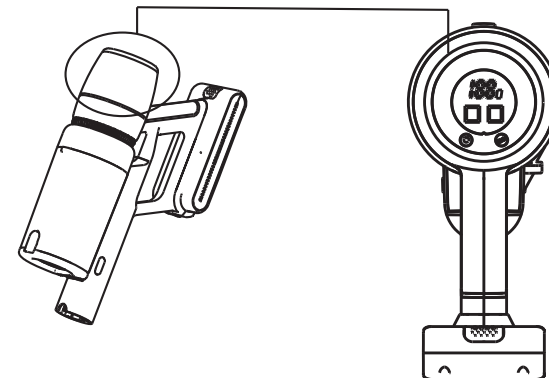


Color of light with different battery electric quantity while charging :
0-39% shows red;
40%-74% shows purple;
75%-100% shows blue;
The light goes off while it is fully charged;

Color of light with different Power while working:
ECO Mode shows blue;
Low Speed Mode shows purple;
High Speed Mode shows red;

Charging your vacuum cleaner


Charging your vacuum cleaner

- 1.Place the machine near to the power supply ,make sure that the vacuum does not shake.
- 2.Connect the machine to the adaptor and plug it into the power supply.
- 3.When the lamp lights up,the vacuum cleaner starts charging.
- 4.The color of the lamp shows different according to the remaining power.
- 5.When the vacuum cleaner is fully charged ,the light goes out.

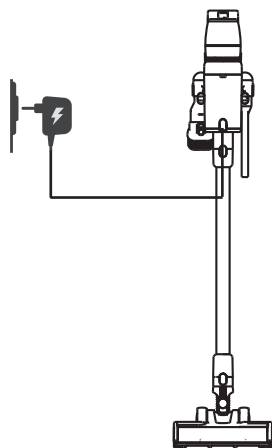

The wall charger base assemble


As show in the picture

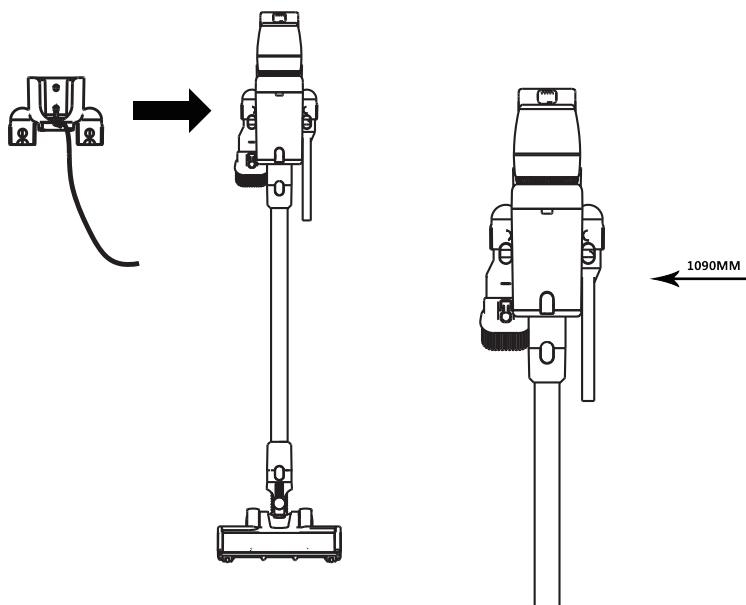

Empty the dust container & dust filter

Empty the dust container & dust filter


Note: Press the button of the dust cup to empty the container.

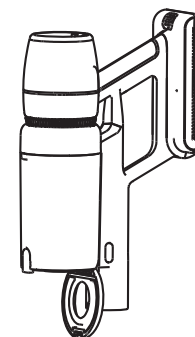

Clean the dust container & dust filter


Note: In order to ensure the good cleaning efficiency of the vacuum cleaner ,Please clean the dust cup and filter after five times of usage.

- 1.Remove the dust cup from the vacuum cleaner.

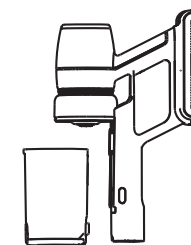

- 2.Press the button of the dust cup .Take down the dust cup as shown in the picture.

3. Take out the HEPA from the HEPA cover and wash the HEPA filter and HEPA cover with cold water. Install them on the vacuum cleaner when they are completely dry. Do not dry with a hair dryer.


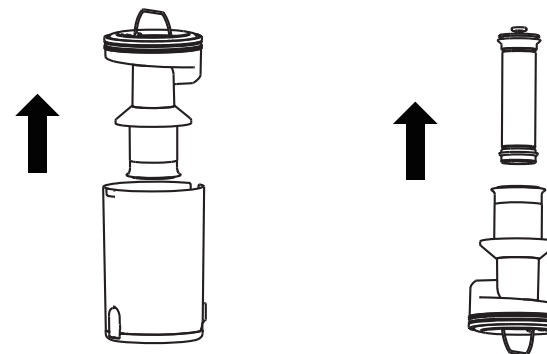


Clean the floor brush

Clean the floor brush

NOTE: Please make sure the vacuum cleaner is turned off when you are cleaning the floor brush.
Please remove the floor brush as shown in the picture.

1. Press the button of the floor brush as shown in the picture.
2. Rotate the floor brush cover and pull the roller out.

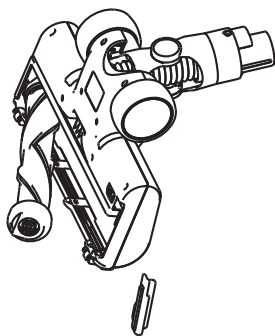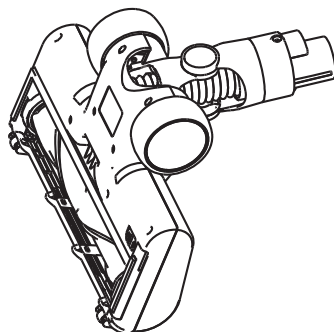

CAUTION

The suction inlet can not be blocked, otherwise, the vacuum cleaner will be protected from overheating.

Please Note

The dust filter is washable. the HEPA needs to be replaced every 3 to 6 months to keep the good cleaning efficiency of the machine.

Warning

Please ensure the vacuum is turned off when you are cleaning the floor brush.

Product parameters

Product parameters

Product model: NH007	Vltage: DC 29.6V
Rating Power: 450W	Noise: ≤80dB
Battery Capacity(mAh): 8×2000mAh	Charging Time(h): 4-5h
Run Time(min): 15(powerful) 25(normal) 55(eco)	Battery Type: Lithium
Net Weight(kg): 2.6Kg	Gross Weight(kg): 3.0Kg
Battery type: lithium battery	Product Size: 365*100*235 (mm)
Dust cup capacity: 0.6L	Air Flow : ≥1.1 M3/MIN
Vacuum : ≥29Kpa (MAX)	



Correct Disposal of this product

This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safety.