

**SL2000 -BATTERY  
POLIVAC BATTERY  
OPERATED 50CM HIGH SPEED  
BURNISHER**



**Operations Manual & Trouble Shooting Guide**

## **How to Operate an SL2000 Stingray Battery Operated Burnisher**

Please find the following correct procedure for the operation of the Polivac a SL2000

Stingray-Battery operated

1. Ensure Battery is fully charged. DO NOT USE the machine while charging

2 The handle height must be adjusted to suit individual operators body proportions.

Adjust the ergo handle, to the correct height by placing the foot or hand on the

ratchet lever then positioning the handle. The correct height of the handle is

around the groin region.

3 When the handle is set at the correct height, the arms should grip the handle in a

comfortable, but loose manner (if your arms are bent at the elbows this is an

indication that you are applying too much effort to control the machine) Re-adjust

the handle.

4 Machine is naturally sitting back(head up), once Press the handle trigger and Safety button

motor will start and machine will move forward itself.

5 To start the machine, first you must depress the red safety button that is next to

the hand trigger, then grasp either of the red triggers, and the motor will engage

the pad. Do not force the trigger without first releasing the safety button as this

will damage the safety release in the trigger mechanism. Once the machine is on,

the safety button can be released.

6 Once the motor has started, engage the pad on the floor and begin walking

behind the machine.

7 Generally, use the left hand for steering and guiding the machine.

8 Always use ultra-high speed Polish on the floor.

9 Walk at a comfortable walking speed.

10 Never use the machine on the same spot for an extended period, as being a high

speed machine the combination of friction and heat could strip or damage the

floor unintentionally.

11 The appliance is not intended for use by young children or infirm persons without supervision.

12 Young children should be supervised to ensure that they do not play with the appliance.

## **BE CAUTIOUS OF THE FOLLOWING**

1. FOR EFFICIENT PERFORMANCE, WHEN OPERATING THE BURNISHER, PLEASE DO NOT DRAIN THE BATTERY LEVEL TO ZERO. ALWAYS ENSURE THAT THE BATTERY LEVEL IS AT MINIMUM, 10%.
2. TILT THE MACHINE SIDEWAYS ONLY
3. DON'T EXPOSE MOTOR AND BATTERY TO ANY LIQUID
4. WHERE POSSIBLE CHARGE THE BATTERY AFTER EACH USE
5. DISCONNECT THE BATTERY CHARGER FROM THE MACHINE ONCE FULLY CHARGED
6. THIS MACHINE IS SELF PROPELLED. THEREFORE, PLEASE DO NOT PUSH DOWN OR LIFT THE HANDLE WHILE MACHINE IS IN OPERATION
7. PRESS THE POWER SWITCH ON THE SMART BATTERY INDICATOR TO CHECK BATTERY CAPACITY AND VOLTAGE
8. DO NOT USE THE MACHINE WHILE CHARGING THE BATTERY
9. REFER TO OPERATIONS MANUAL BEFORE USING THE MACHINE